

To Register Via Update Client




1 Visit our site www.foxwelltech.us and then click **Support** at the home page. Click **Tools** at the support page and find the product you have to download the update client.




2 Unzip the file and find the installer to install the update client to your computer.




3 Click the desktop icon to launch the update client and click **Register** icon to create a Foxwell ID.

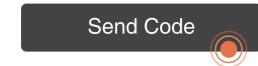

4 Enter one of your email addresses as your user ID and click the Send Code button. We will send a 4-digit verification code to the email you just entered.

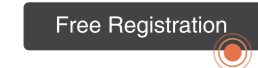

5 Find the security code in your mailbox, input the code, create a password and click **Free Registration** to complete.

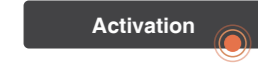


6 Sign in your Foxwell account and select **Activation** page. Connect the tool with the PC and click Activate button to activate.

Vehicle Selection

Manual Selection

Manual Selection

Choose Manual Selection.

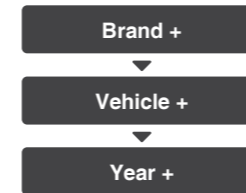

Choose Brand--Vehicle--Year to select the car model you need. Or click Reset to clear the vehicle information.



Please click Enter to download the vehicle data after finishing the vehicle selection.

Activate Program Relearn Guide

Once the data download is completed, the TPMS function menu will show.

OE Selection

OE Selection

Choose OE Selection.



Choose Sensor Brand--OE number same with your car model Or click Reset to clear sensor information. (OE number can be found on the original sensor)




Please click Enter to download the vehicle data after finishing the vehicle selection.


Activate Program Relearn Guide

Once the data download is completed, the TPMS function menu will show.


TPMS Activation

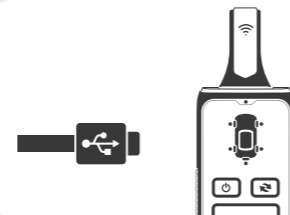

1 Unplug the tool with computer after data transfer completed.

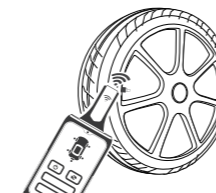

2 Place the tool to the tire valve correctly and activate the sensors in the order of LF(Left Front), RF(Right Front), RR(Right Rear) and LR(Left Rear).

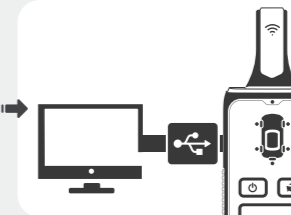


3 Connect to the PC to read sensors' information like ID, pressure etc after activating all sensors.

Foxwell TPMS Sensor Programming


Manual Create ID



Clone ID by Activation

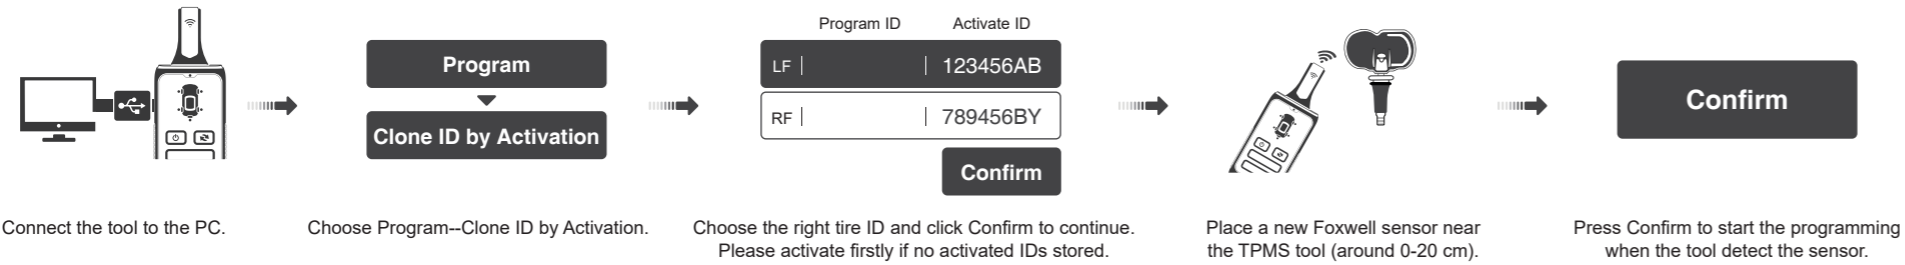


Automatic Create ID

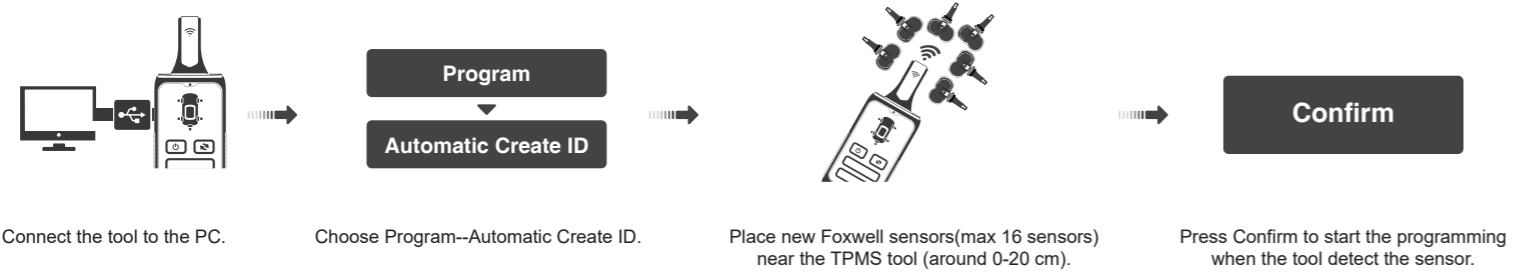

Note: After finished the programming and installation, please follow the instructions on the tool to do the relearning.

Description

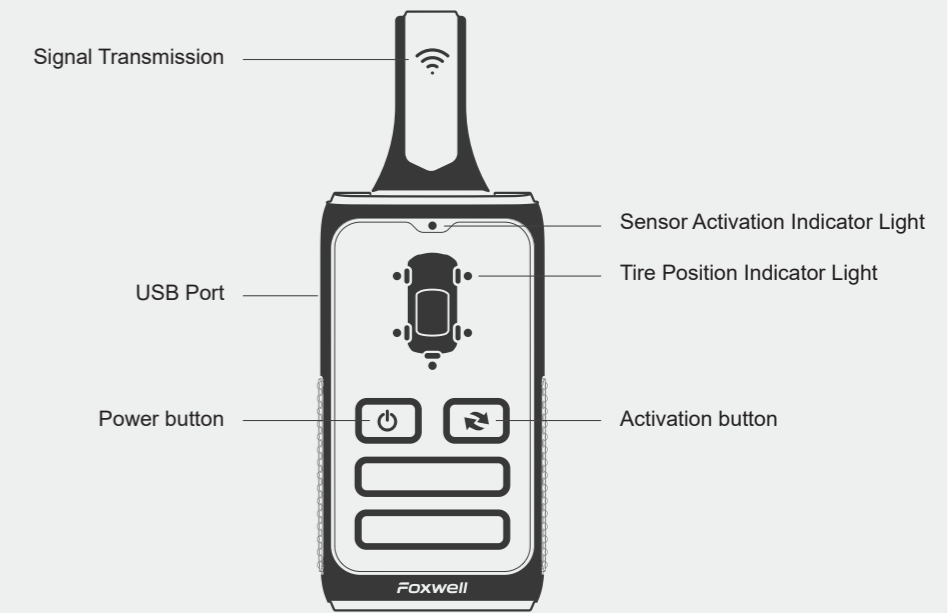

Contact Us

For service and support, please contact us.

- Website : www.foxwelltech.us
- E-mail : support@foxwelltech.com
- Service Number : + 86 - 755 - 26697229
- Fax : + 86 - 755 - 26897226



REGISTER YOUR PRODUCT AT
<http://www.foxwelltech.us/register.html>