


Vehicle/Battery Connection


OBDII/EOBD Test

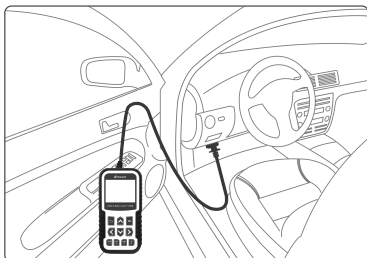


1. Locate the data link connector (DLC) under the dash on the driver side of the vehicle.
2. Plug the tester to the vehicle DLC with OBDII adapter.
3. Switch the ignition key to the ON position.
4. Choose OBDII/EOBD APP to start test.

Battery Test


If you are testing the battery inside a vehicle, make sure all accessory loads are cut off, the key is not in the ON position and the doors are closed.

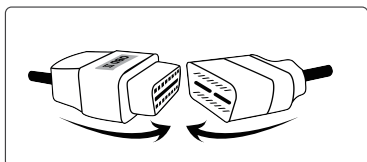


- 1 Connect the current clamp cable to the OBDII adapter of the scanner.

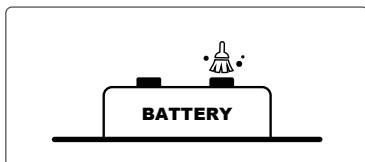

- 2 Clean the battery posts or side terminals.

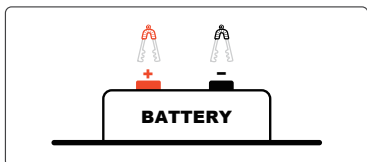

- 3 Connect the red clamp to the positive (+) terminal and the black clamp to the negative (-) terminal.

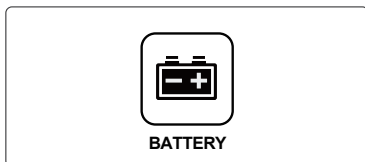


- 4 When the tester is correctly connected, choose Battery App to start test.

Tester Descriptions



- A** OBDII Cable
- B** LCD Display
- C** Green LED Display - indicates the engine system is working normally and no DTCs are found.
- D** Yellow LED Display - shows the tool finds a possible problem. Pending DTCs exist or/and some of the vehicle's emission monitors have not run their diagnostic testing.
- E** Red LED Display - indicates there are some problems in one or more of the vehicle's systems. In this case, the MIL lamp on the instrument panel is on.
- F** UP Key
- G** DOWN Key
- H** LEFT SCROLL KEY
- I** RIGHT SCROLL KEY
- J** I/M Readiness (F3) Key - quick checks state emissions readiness and drive cycle verification.
- K** BACK Key
- L** OK Key
- M** Help (F4) Key - accesses to help information.
- N** ER (F2) Key - accesses to Erase code
- O** DTCs (F1) Key - to read the stored DTCs.
- P** USB port
- Q** Battery Clamp Cable - connects with the device to perform battery testing function.

Updating

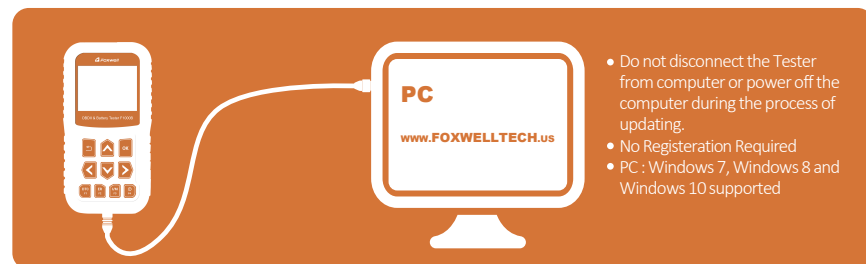

The Upgrade Process

- 1 Download the update tool NT Wonder and install it.


NT-WONDER

- 2 Enable NT Wonder and connect F1000B to the computer with USB cable.

















- 3 Click Update online or Update offline to start update according to the software version conditions.

Update online

- 4 An Update Finished message displays when the update is completed.

UPDATE FINISHED

Retrieve I/M

MIL		Malfunction Indicator Lamp	IGN		Ignition
DTC		Diagnostic Trouble Codes	Pd DTC		Pending Diagnostic Trouble Codes
MIS		Misfire	EVAP		Evaporative System
FUE		Fuel System	AIR		Intake Air System
CCM		Comprehensive Component Monitor	O2S		Oxygen Sensor
CAT		Catalyst	HRT		Oxygen sensor heater
HCAT		Heated Catalyst	EGR		Exhaust Gas Recirculation

To Print Test Results

The test results stored in the tester and can be printed through computer. Test data can only be imported to your computer through NT Wonder.

- 1 Connect the tester to the computer via USB cable provided.





- 2 Launch NT Wonder and choose Print Button from the menu.

- 4 Click Print key on NT Wonder to print the test data.

- 3 Select Print Data from home screen of the tester and choose the data you want print from the option.

Contact Us

For service and support, please contact us.

	WebSite:	www.foxwelltech.us
	E-mail:	support@foxwelltech.com
	Service Number:	+86 - 755 - 26697229
	Fax:	+86 - 755 - 26897226