

### To Register Through Website



- 1 Visit Foxwell website [www.foxwelltech.us](http://www.foxwelltech.us) and press **Register** icon, or go to the registration page by selecting **Support** from home page and then click **Register**.



- 2 Enter one of your email addresses as your user ID and click the **Send Code** button. We will send a 4-digit verification code to the email you just entered. Find the security code in your mailbox, input the code, create a password and click **Free Registration** to complete.



- 3 Sign in to the Member Center, click **New Registration**, input the right serial number and click **Submit** to activate the product.

### Register by Scanning QR Code



 
- 1 Enter **Update** and connect WIFI, then scan the QR code to register.



- 2 Scan the QR code and enter your own email address. Click "Send code" to find the verification code in your mailbox .




- 3 Create a password and then click "**Free registration**" to complete.

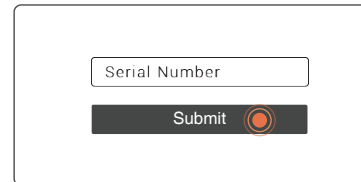

- 4 After logging in successfully, click the **Submit** button to complete product registration when the serial number shows automatically or input correct serial number manually.

### Vehicle Connection

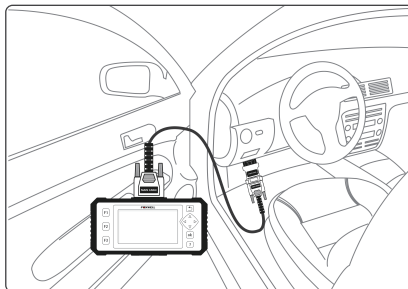 


1. Locate the data link connector(DLC) under the dash on the driver side of the vehicle.
2. Connect the diagnostic cable to the scanner and plug it to the vehicle DLC.
3. Switch the ignition key to the ON position.
4. Go to Main menu to choose diagnostic software to start test.

### Serial Number

 To find the serial number:

1. On the back of the main unit.



2. In the scanner Settings>About page.



### Diagnostic Operations

- Before start diagnosis, please make sure:
  1. The ignition switch is turned to ON position.
  2. The engine is off.
  3. The vehicle battery voltage is between 10-14 volts.
  4. The scanner is correctly connected to the vehicle.
- Don't connect or disconnect the equipments while the ignition is on or the engine is running.

1 Establish communication with the vehicle via diagnostic cable.

2 Identify the vehicle either by VIN reading or entering vehicle specifications manually.

3 Find the control modules installed in the vehicle either by Quick Scan or manual selection.

 
4 Start the tests and make records of test data when necessary.

### Powering up the scanner


Before using the scanner, make sure to provide power to the scanner.

The unit operates on any of the following sources:

12-volt vehicle power




USB connection to computer

 


### Update

 
Before updating, please make sure you have created a Foxwell ID and your network works correctly.

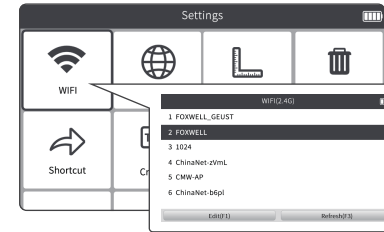

 1 Enter **Update** and select an available WiFi to connect.

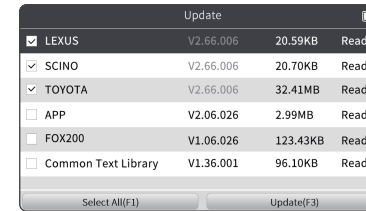

 2 Choose the software you wish to update and click the **Update** or **Select All** button to download.

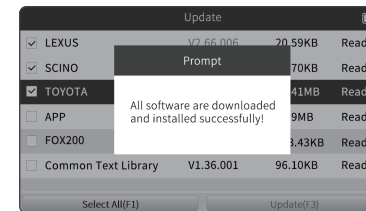

3 When all are updated, an “**All software downloads are successfully installed!**” message displays.

### Contact Us

For service and support, please contact us.

- WebSite : [www.foxwelltech.us](http://www.foxwelltech.us)
- E-mail : [support@foxwelltech.com](mailto:support@foxwelltech.com)
- Service Number : + 86 - 755 - 26697229
- Fax : + 86 - 755 - 26897226



REGISTER YOUR PRODUCT AT  
<http://www.foxwelltech.us/register.html>