



Shenzhen Foxwell Technology Co., Ltd.

Diagnostic Operations

- Before start diagnosis, please make sure:
 - 1. The ignition switch is turned to ON position.
 - 3. The vehicle battery voltage is between 10-14 volts
- 2. The engine is off.
- 4. The scanner is correctly connected to the vehicle.
- Don't connect or disconnect the equipments while the ignition is on or the engine is running.

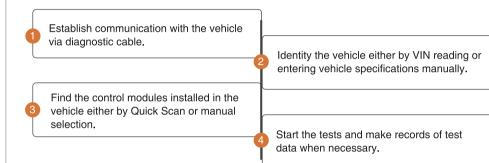

Vehicle Connection

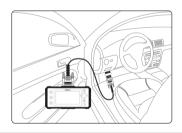


- 1. Locate the data link connector(DLC) under the dash on the driver side of the vehicle.
- 2. Connect the diagnostic cable to the scanner and plug it to the vehicle DLC.
- 3. Switch the ignition key to the ON position.
- 4. Go to Main menu to choose diagnostic software to start test.

Powering up the scanner

Before using the scanner, make sure to provide power to the scanner.

 The unit operates on any of the following sources:



USB connection to computer


Pictures illustrated here are for reference only and this Quick Start Guide is subject to change without prior notice. For more detailed operations, please refer to the User's Manual.



Shenzhen Foxwell Technology Co., Ltd.

Update

Before updating, please make sure you have created a Foxwell ID and your network works correctly.

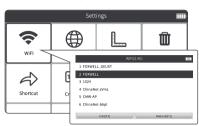

Enter **Update** and select an available WIFI to connect.





Choose the software you wish to update and click the Update or Select All button to download.

When all are updated, an "All software downloads are successfully installed!"message displays.

Serial Number

To find the serial number:

1. On the back of the main unit.

Multi-System Scanr	ner
Rated input	8-18V DC
Operating temperature —	0°C-60°C
Storage temperature	-20°C-70°C

2. In the scanner Settings-About page.



Contact Us

For service and support, please contact us.

WebSite: www.foxwelltech.us

F-mail · support@foxwelltech.com

Service Number : + 86 - 755 - 26697229

Fax: +86 - 755 - 26897226



REGISTER YOUR PRODUCT AT http://www.foxwelltech.us/register.html

Pictures illustrated here are for reference only and this Quick Start Guide is subject to change without prior notice. For more detailed operations, please refer to the User's Manual.